


Electric Wiring Diagram Type 911 T, 911 E, 911 S

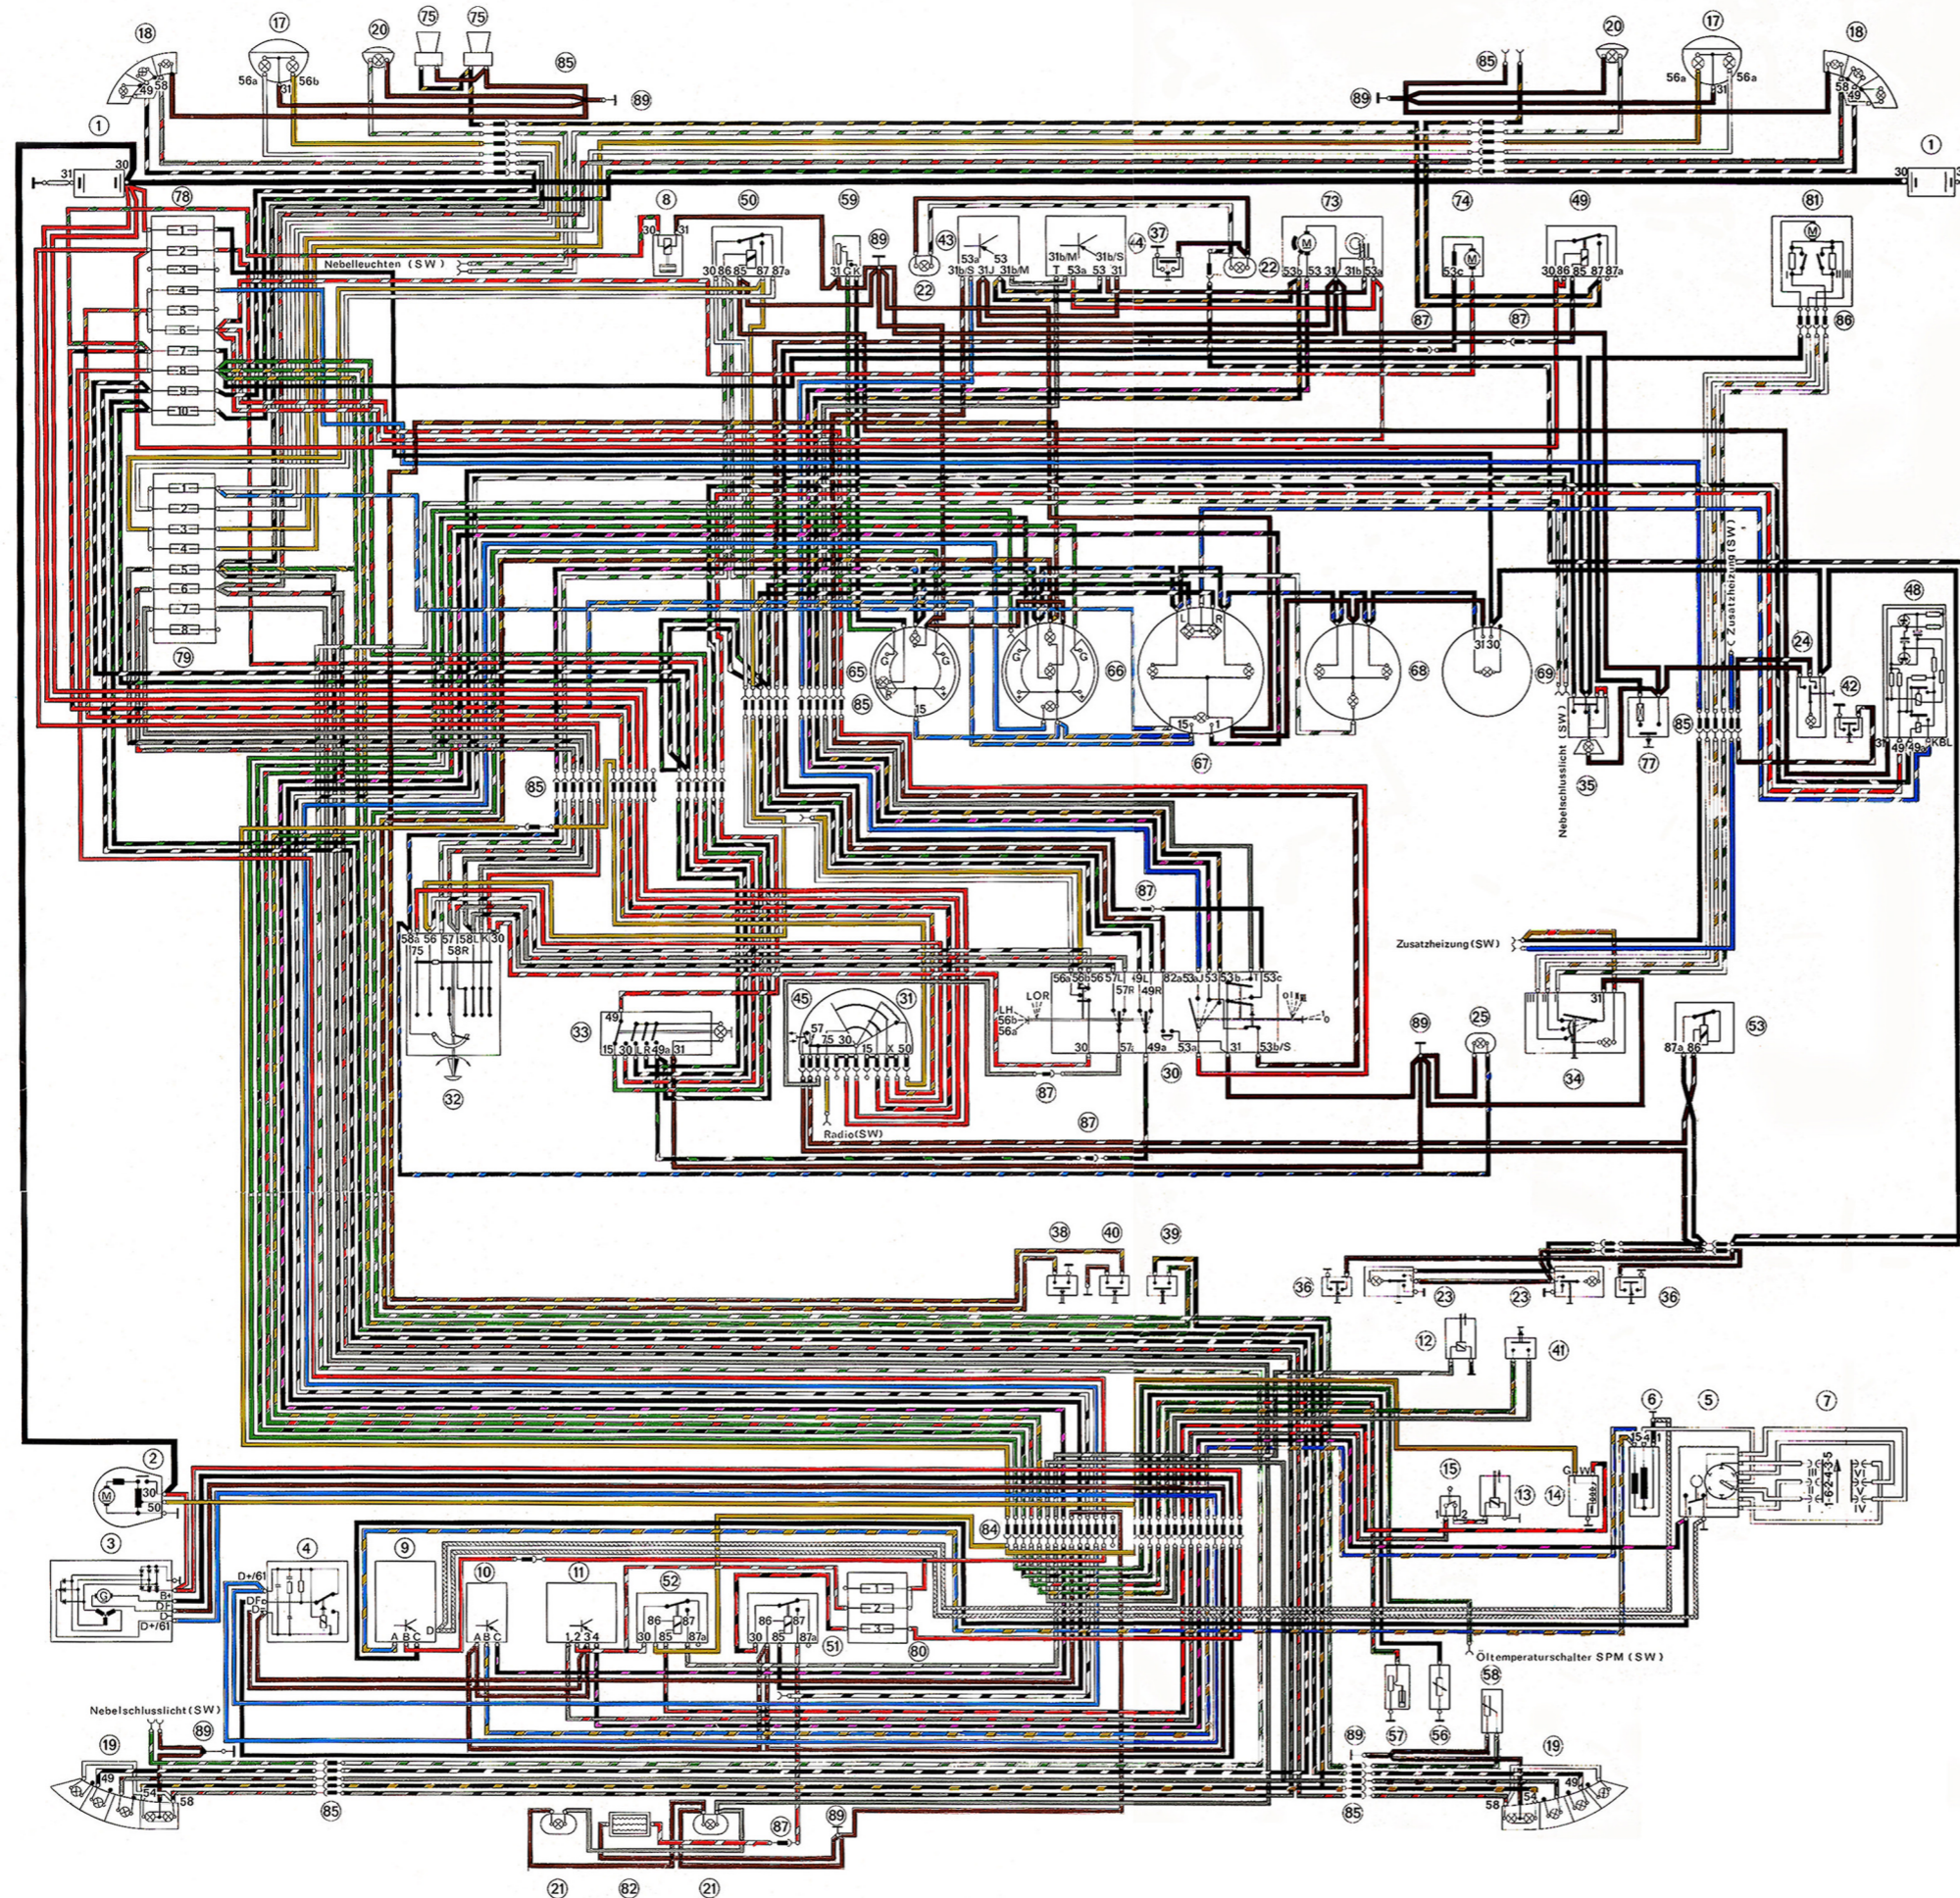

- | | |
|---|--|
| 1 Battery | 36 Door contact switch |
| 2 Starter | 37 Switch for trunk room light |
| 3 Alternator | 38 Hand brake contact |
| 4 Governor | 39 Brake light switch |
| 5 Ignition distributor | 40 Brake warning switch (USA only) |
| 6 Ignition transformer | 41 Backup light switch |
| 7 Spark plugs | 42 Switch for glovebox light |
| 8 Gasoline pump | 43 Interval switch |
| 9 BHKZ unit | 44 Wiper follow-up switch |
| 10 Intermediate unit | 45 Buzzer contact (USA only) |
| 11 Speed switch (only E and S) | 48 Direction warning blinker indicator |
| 12 Electromagnetic control valve | 49 Horn relay |
| 13 Lifting magnet (stop) (only E and S; on 911 T USA solenoid valve) | 50 Headlight flasher changeover relay |
| 14 Temperature time switch | 51 Rear window heater relay |
| 15 Microswitch (E and S only) | 52 Auxiliary starting relay (E and S only) |
| 17 Headlamps | 53 Buzzer (USA only) |
| 18 Blinker, clearance and side marker lamps (side marker lamps USA only) | 56 Oil temperature indicator |
| 19 Tail, brake, blinker, side marker and backup lamps (side marker lamps USA only) | 57 Oil pressure indicator |
| 20 Fog lamp (optional) | 58 Oil level indicator |
| 21 License plate lamp | 59 Indicator for fuel gauge |
| 22 Trunk lamp | 65 Small combination instrument |
| 23 Interior lamp | 66 Large combination instrument |
| 24 Glovebox lamp | 67 Transistor revolution counter |
| 25 Ashtray lamp | 68 Speedometer |
| 30 Blinker, dimming, headlamp flasher, wiper-washer switch with signal button in steering wheel | 69 Electric time clock |
| 31 Steering ignition starter switch | 73 Wiper motor |
| 32 Light switch | 74 Washer pump |
| 33 Warning light switch (not applicable in Italy) | 75 Fanfare horn |
| 34 Fan and separate heater switch | 77 Cigarette lighter |
| 35 Rear window heater switch | 78 Fuse box I 10-pole |
| | 79 Fuse box II 8-pole |
| | 80 Fuse box III 3-pole |
| | 81 Fan motor |
| | 82 Heated pane |
| | 84 Plug connection 14-pole |
| | 85 Plug-connection 6-pole |
| | 86 Plug-connection 4-pole |
| | 87 Plug-connection 1-pole |
| | 89 Ground connection - body switch |

- FUSES:**
- | | |
|---|---|
| Fusebox I | Fusebox II |
| 1 Interior light, time clock, trunk light | 1 High beam left |
| 2 Warning light | 2 High beam right |
| 3 (Window lifter) | 3 Dimmer left |
| 4 Cigarette lighter | 4 Dimmer right |
| 5 (Slide roof) | 5 Clearance light left |
| 6 Windshield wiper, washer pump | 6 Clearance light right |
| 7 Fresh air fan | 7 License plate light |
| 8 Brake, blinker, backup lights | 8 (Fog lights) |
| 9 Blinker light front left | |
| 10 Blinker light front right | Fusebox III |
| | 1 (Sportomatic) |
| | 2 Stop magnet, solenoid valve, starting valve |
| | 3 Rear window heater |

CAUTION!
Disconnection of battery with the engine running will result in immediate destruction of alternator.